Wireless
Optical Desktop

Wireless Slim Keyboard & Wireless Optical Mouse

User Manual

FEDERAL COMMUNICATIONS

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions : (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection. This equipment generates uses and can radiated radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in particular installation if this equipment dose cause harmful interference to radio or television, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures :

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician of help.

Shielded interface cables must be used in order to comply with emission limits.
Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate equipment.

System Requirement

1. IBM-Compatible PC
2. Microsoft Windows 98SE/ME/2000/XP
3. Available USB port

Install

1 Connect the Receiver to Your Computer

- Please plug the USB Mini Receiver/Adapter into a rectangular USB port on your computer.

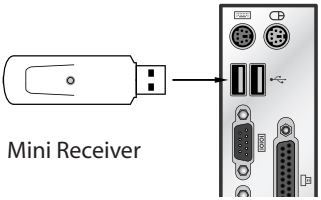

2 Insert the Mouse Batteries

- To open the batteries cover, please press the button at the back end of the mouse with some force.

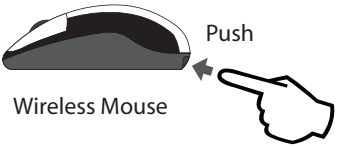

- Please insert 2 AAA rechargeable batteries into the Mouse battery slot. Please also use the rechargeable batteries (with "For Mouse" label on top) that come with the package. Making sure the directions of batteries are inserted correctly. Afterward you may close the batteries' cover.

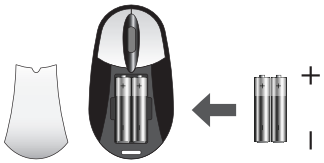

3 Insert the Keyboard Batteries

- Please insert 2 AAA batteries into the Keyboard battery slot, which is located on the back of the keyboard. Please also use the batteries (with "For Keyboard" label on top) that come with the package. Making sure the directions of batteries are inserted correctly.

4 Connection Mouse

- Please press the connect button on the Mini Receiver/Adapter.

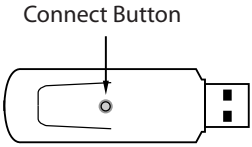

- Then press the connect button on the bottom surface of the mouse.

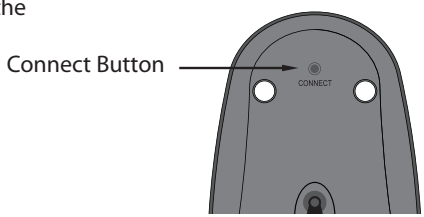

5 Connection Keyboard

- Please press the connect button on the Mini Receiver/Adapter.

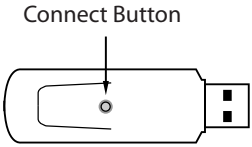

- Then gently press the connect button on the keyboard.

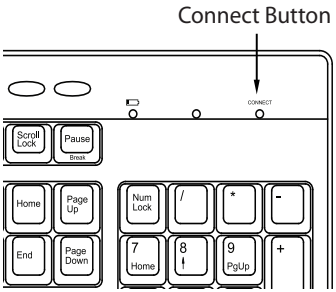

6 Test the mouse

- Please move the mouse around to test whether the wireless connection has been established or not. If the receive signal LED on the receiver flashes, it means the wireless connection has been established. If the receive signal LED does not flash or the mouse pointer on your monitor screen does not move, you need to repeat the connection step again.

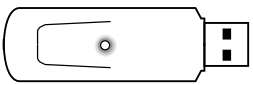

7 Charge mouse

- For the first time use, please recharge the mouse to its full power capacity (at least 8 hours). To recharge the mouse, please take out the rechargeable cable that comes with the package. Follow the picture description down below, and plug the cable into an appropriate USB slot. Then you may plug rechargeable cable's power supply pin into the front end of the mouse.

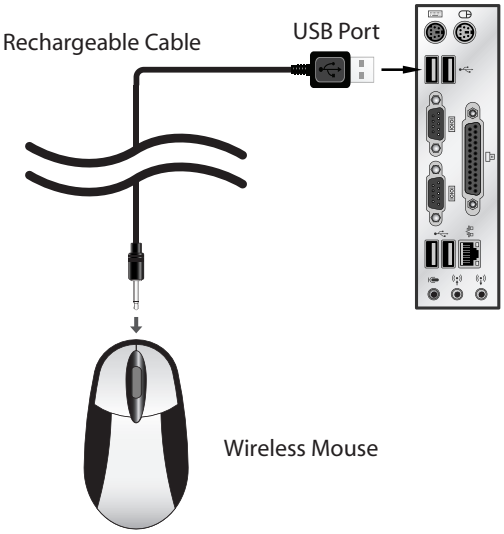

- When the rechargeable cable's power supply pin is plugged into the front end of the mouse, the mouse will turn into rechargeable mode. Under the rechargeable mode, you may still use the mouse normally. After recharging for 8 hours, the mouse batteries are full of power, and you may unplug the power supply pin from the mouse to finish the recharging process.

CAUTION

- When the mouse stays silence for a while, the mouse will turn into a sleeping mode after the energy saving sensor has been activated automatically. To resume operation, just simply click on any mouse button.
- For the first time usage, please charge the mouse with a minimum of eight(8) hours for maximum efficiency.
- Please use rechargeable batteries for recharging purpose. Using non-rechargeable batteries for recharging purpose may severely damage the mouse.
- Please connect the Mini Receiver to the computer main frame to ensure the best connection quality.
- If there is a delay for the mouse under normal use, then it means that the mouse is short in power. At this moment, please recharge the mouse. After each time you re-setup the Mini-Receiver, or replace the batteries of the mouse, please remember to redo the connection process.

Install Software

- If you have previously installed other keyboard or mouse drivers on your Computer, please uninstall them first.
- Please make sure that the keyboard is properly connected to the computer.

1. Turn on the computer.
2. To use all features of your keyboard, install the software. If the program does not auto-run, please find the "**setup.exe**" in the driver folder. And then follow the information on the screen to complete installation.
3. Restart PC when the installation is completed. Make sure the "Office Keyboard software" is executed and a Key Caps " " Icon appears on the right in the taskbar.

Hot Key Functions

- ***BACK*** : Go back to the previous web page.
- ***FORWARD*** : Go to the next web page.
- ***STOP*** : Stop default web browser from loading or refreshing a web page.
- ***REFRESH*** : Update the content of the current web page on a default web browser.
- ***SEARCH*** : Open the "Find "window in the START taskbar.
- ***FAVORITES*** : Open the "Favorites" group.
- ***WEB/HOME*** : Start your default browser and go immediately to your Home Web page.
- ***MAIL*** : Start the default E-mail program.
- ***PLAY/PAUSE*** : Play or pause the default media player.
- ***STOP*** : Stops the media.
- ***PREVIOUS TRACK*** : Change to the previous track of the default media player.
- ***NEXT TRACK*** : Change to the next track of the default media player.
- ***VOLUME DOWN*** : Press and release, or press and hold to decrease the volume.
- ***VOLUME UP*** : Press and release, or press and hold to increase the volume.
- ***MUTE*** : Stops all audio. Press again to resume audio.
- ***CALCULATOR*** : Start the "CALCULATOR" program.
- ***MY COMPUTER*** : Open the "My Computer" window.

Re-Define the Hot Key Functions

1. First, you will need to install the Hot Keys 6.12 driver.

2. Once installed, you will see a Keyboard icon at the bottom right of your screen. This icon will appear every time you start the computer.

3. The Hot Keys are already set up once you have installed the driver. If you want to re-define the Hot Keys, you have to click on the Keyboard icon at the bottom right of your screen.

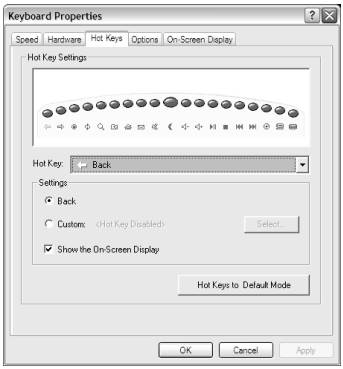

4. A Keyboard properties' window will open. Go to the "**Hot Keys**" section. You will see the following screen with 18 Buttons, just like the buttons on your keyboard.

5. Each time you want to re-define the Hot Keys just click on the Button, then go to Custom, and click on the "**Select**" button. Now go to the Browse File and find the file you want to apply to your Hot Key. When finished, click on the "**OK**" Button, then click Apply. The Hot Key is now programmed and the keyboard properties' window can be closed.

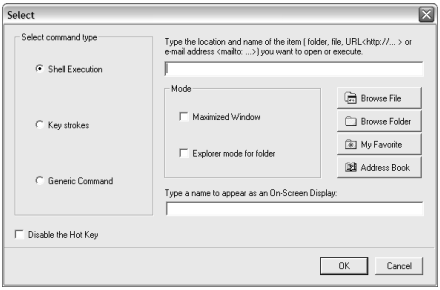

Resolving Basic Problems

- If your cursor is controlled by another system in an office or multi-user environment, try to unload the batters, insert them again after 2 minutes and repeat step "Connection".
- A desk made of iron will negatively impact wireless mouse operations.
- If your devices don't function smoothly, you may try the following steps :

  a. replace with new batteries
  b. repeat step "Connection"
  c. move wireless mouse closer to receiver

Wireless
Optical Desktop

Wireless Slim Keyboard & Wireless Optical Mouse

User Manual

CAN-2004W